


## **Product 804835**



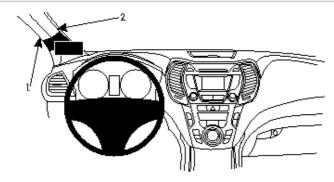

# 804835 ProClip

#### Left mount


The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320288048352

#### Item no 804835 fits:

Hyundai Santa Fe 13-15 (For all countries)

### **INSTALLATION INSTRUCTIONS**

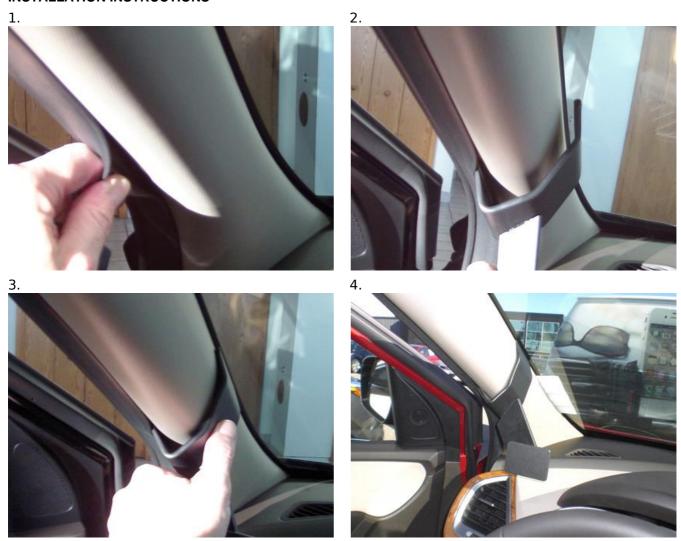

Please read all of the instructions and look at the pictures before attaching the ProClip.

- 1. Peel off the adheisve tape covers on the ProClip. Pull out the rubber sealent on the A-post slightly.
- 2. Press the angled edge on the lower part of the ProClip into the gap and hook it around the A-post.
- 3. Press the ProClip upward/forward so the angled upper edge hooks around the A-post. Press down on top of the ProClip so you hear/feel it snaps into place.
- 4. The ProClip is in place.